

Garmin Map76CSx



Initial Configuration

Turn It On



If inside a building, this screen will appear in a few minutes.....

Press the Enter Button to use with GPS off

Press and hold down the Red Button

Changing Garmin Default Settings

Press the Menu button **twice** to access the Main Menu

Critical Settings

Time should be changed to your local Zone

Personal Settings

Setup Page



Display

- Display Mode: Daytime
- Daytime Color Scheme: Sapphire
- Nighttime Color Scheme: Sapphire
- Backlight Timeout: Stays On
- Backlight Level: 70%

Tones

- Message Beep: Tone 16
- Key Beep: Off
- Power Beep: Tone 1
- Turn Warning (Early): Tone 9
- Turn Warning (Final): Tone 10
- Proximity Alarm Tones: Mute

Page Seq.

- Satellite
- Map
- Compass
- Area Calculation
- Tracks
- <Add Page>
- Clear All
- Include All

Adding and Modifying Data Fields

Map Page

Step 1

Step 2



Press the Menu Button **once** for the Menu Page

Adding and Modifying Data Fields

Compass Page



Repeat the same process, but change to 3 Data Fields

Map Page Settings


Guidance Text



Orientation



Tracks Page Settings

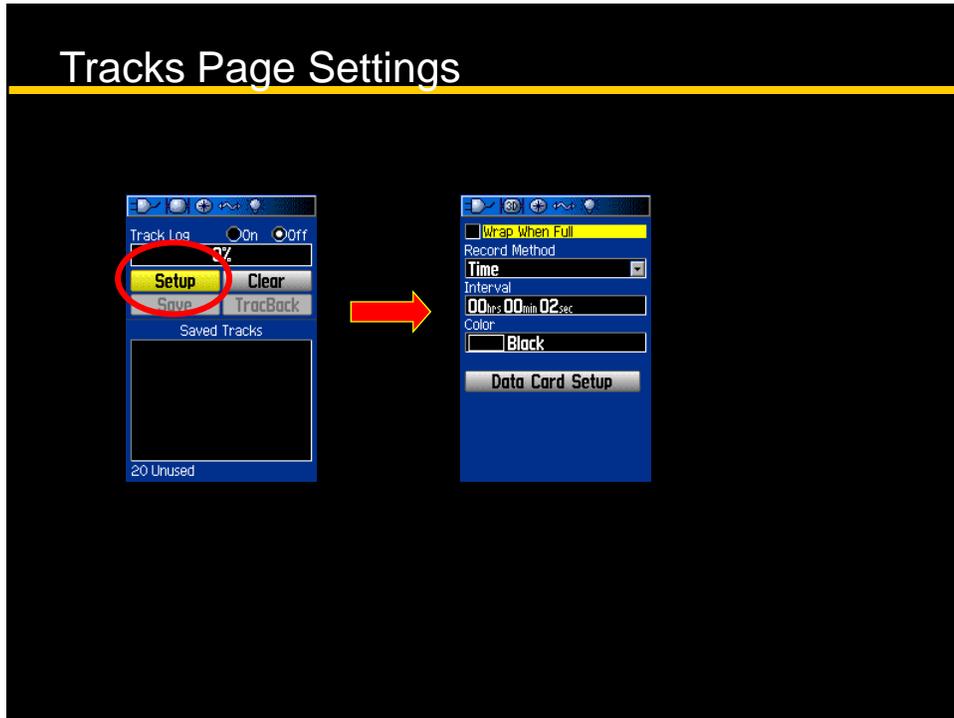

Delete All Data – The Quick Method

